




Stewart Steel Inc.
 Box 1087
 Weyburn, Sask., Canada
 S4H 2L3
 Ph .866-940-4411
 Fax 306-848-3519

EXT-CN-FT0708(R) Extender

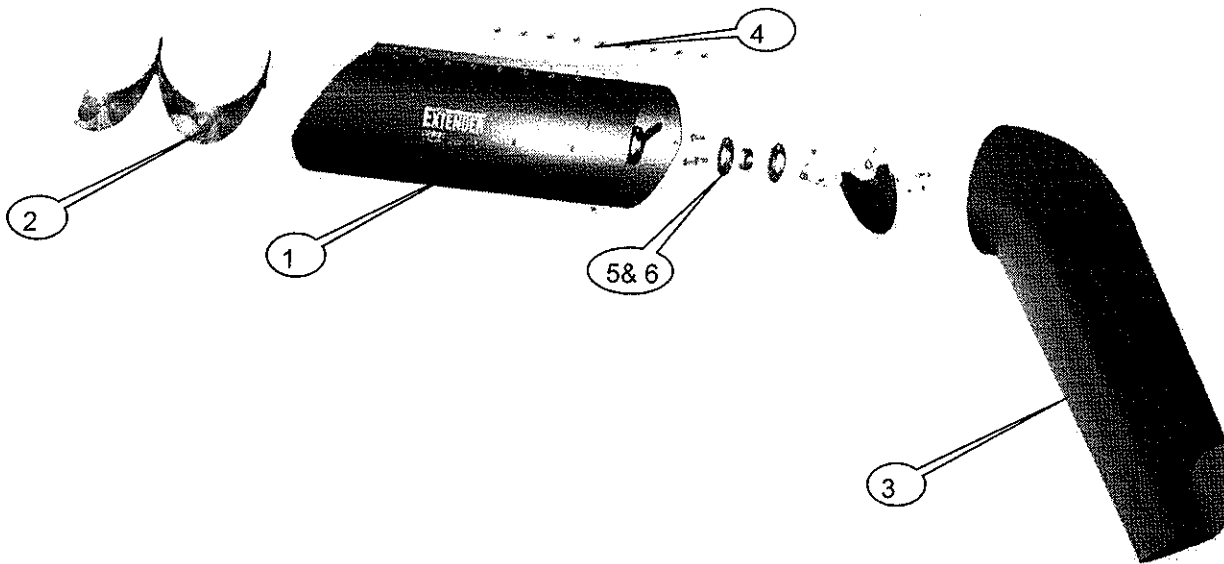

Parts list for EXT-CN-FT0708(R) Extender

Description	Part Number	Quantity
1. Outer Tube/Clamp	EXT-CN-FT0708-OT	1
2. Flighting	EFCFT-LH17	1
3. #14 Spout	EXT-CN-FSSP	1
4. Bolt Package BPKFT3	EBPK-CN-FT3	1
5. Bearing (30mm) & collar	AEL206D1	1
6. #62 Bearing flangettes	62mm-3	2

EXTENDER-EXT-CNH-FT0708

By: Stewart Steel Inc.


COMBINE UNLOADING AUGER EXTENSION FOR: 2007 -2008 Case 7010 & 8010
and New Holland 2007-2008 - CR940, CR960 & CR970

Installation Instructions:

1. Remove plastic spout, bearing and holder from factory unloading auger
2. From the backside of the welded strap on combine side of the unloading auger, cut completely around the unloading auger just behind the welds that secure the tube strap. (See Figure 1)
3. Weld on flighting so flighting is continuous to the end of the 4-1/2 inch auger tube. (If flighting is already welded on ignore this procedure).
4. Slide the new tube/clamp to the end of the unloading auger as far as possible. Install bolts and nuts loosely.
5. Install bearing in hanger in the proper position on the auger. Move in or out to align the bearing in the proper spot. Tighten bolts on tube clamp and bearing flanges.
6. To install spout insert hinge blank between hinge and extender sleeve to keep door open (Fig. 5). This makes install of the spout much easier. Install spout by sliding over the end of the tube bottom first. Line up seam on spout with seam on Extender tube top. Pull bottom of spout out against grain saver door. (The top of the spout may have to be pried over the edge of the sleeve with a screw driver). Then put in 1/4" flange hex bolts and fender washers on top to hold spout in place. Add the rest of bolts and washers. Reach in from end with hooked rod and check that door moves freely. This will free the hinge blank holding the door open. It is critical for the operation of the Grain saver door that the spout and tube seams line up. If door binds on one side adjust by loosening bolts turning spout slightly.

NOTE: It is critical for the operation of the Grain saver door that the spout and tube seams line up and that the spout is pushed out tight against the bottom hinge. When spout install is complete. Reach in from discharge end with a hooked rod and pull on door to ensure it is working freely.

Figure 1

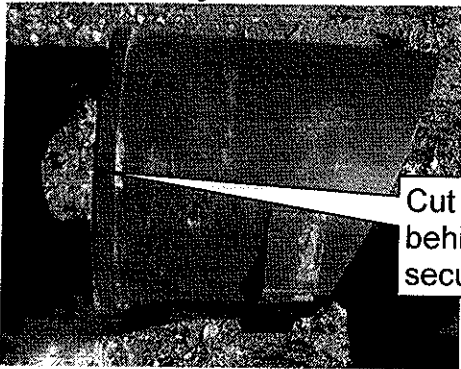

Cut off tube just behind welds that secure strap

Figure 3


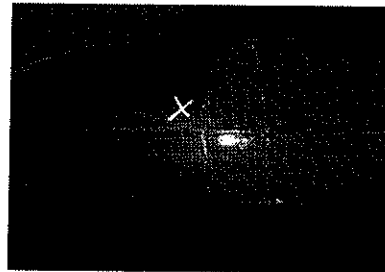


figure 4

Figure 5

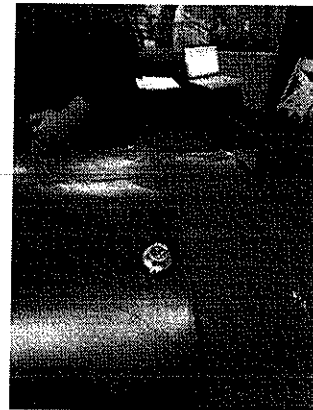

WARRANTY: STEWART STEEL INC. WARRANTY COVERS ALL THE ABOVE PARTS FOR A PERIOD OF 1 YEAR FROM TIME OF PURCHASE. THE WARRANTY DOES NOT COVER ANY PARTS MADE AND SOLD BY THE ORIGINAL MANUFACTURER OR ANY PARTS THAT WERE PART OF THE ORIGINAL COMBINE'S CONSTRUCTION.

CAUTION:

* NEVER LEAVE UNLOADING AUGER FULL UNLESS ABSOLUTELY NECESSARY!