



Stewart Steel Inc.
Box 1087
Weyburn, Sask., Canada
S4H 2L3
Ph 306-842-4411
Fax 306-848-3519

X-Streme Instructions

1. Mount left and right side mounting brackets with 5/16" x 3/4" bolts flat washer and locknut (Fig 1 and Fig 2)

Figure 1



Figure 2



2. Cut out rear of spout with jigsaw following line for size of auger

Figure 3

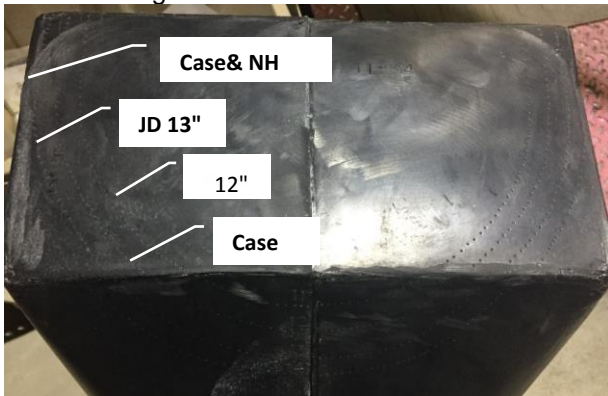


Figure 4



3. Bolt spout to brackets with 1/4" x 3/4" bolts and fender washers



Attach with
1/4" bolts
& washers

